

### LINE EchoPod® & EchoSonic® II **Ultrasonic Liquid Level Sensors**



The EchoPod and EchoSonic II are innovative ultrasonic liquid level sensor families that replace float, conductance and pressure sensors that fail due to contact with dirty, sticky and scaling media in small, medium and large capacity tanks. Applied in chemical, water and wastewater applications, these general purpose sensors are available with single and multi-function capabilities including continuous level measurement, switching and control.

For input to a PLC or other controller, measurement outputs include current, voltage and frequency. Models with four relays can be configured for level alarms and/or stand-alone level control such as automatic fill or empty functions using the embedded level controller. PC configuration is simple with WebCal<sup>™</sup> software.

> in the USA

	E	choPod & E	choSonic I	Ultrasonic	Liquid Leve	el Sensors (	General Spe	cifications		
Model	DL34-00	DL24-00	DL14-00	DS14-00	DX10-00	DL10-00	LU27-00	LU23-00	LU28-00	LU29-00
Price	<>	<>	<>	<>	<>	<>	<>	<>	<>	<>
Туре					Ultras	sonic				
Class					General Purpose	(non-hazardous)				
Range	8 in to 18.0 ft (20 cm to 5.5m)	4 in to 9.8 ft (10 cm to 3m)		2 in to 4.1 ft (5	cm to 1.25m)				8 in to 32.8 ft (20 cm to 10m)	
Output Types	4-20 r	mA and (4) SPST	relays	(4) SPST relays	0-5V, 0-10V, 976-2000 Hz		4-20 mA			
Install	Top Wall									
Mounting	2" NPT 1" NPT 2" NPT									
Relays	(4) SPST No Relay									
Configuration	WebCal Software (free download) and LI99-1001 Fob USB Adapter (purchased separately)									
Ambient Temperature	-31° to 140°F (-35° to 60°C)									
Process Temperature	20° to 140°F (-7° to 60°C)					-4° to 140°F (-20° to 60°C)				
Pressure	30 PSI (2 bar) max.									
Material	PVDF transducer / NEMA Type 6P polycarbonate enclosure IP67									
Weight (lbs)	1.8	0.9	0.5	0.5	0.5	0.5	1.4	1.8	1.8	1.8



WebCal



L199-1001

#### WebCal Software

WebCal PC software is a utility program that allows users to easily configure their EchoSonic II and EchoPod level transmitters, switches, and controllers. Download your free copy of WebCal at www.AutomationDirect.com, and connect your sensor through our Fob USB adapter (LI99-1001). Develop your configuration using pre-programmed function menus as the tank graphic and set point fields automatically change to match your configuration. Then, input your level set point values and click the Write to Unit button. Your configuration will be downloaded into the sensor and verified in less than a second. Last, click the Wiring Diagram button to open a wiring schematic of your configuration in PDF format. Print the document, disconnect the sensor and wire it per the schematic. It's that simple.

Configuration files can be named, saved, emailed, printed, opened and used again under revision control. The advanced feature page enables you to change the measurement signal, output filtering and invert relay states from NO to NC. As new software or firmware becomes available, they can be downloaded and updated through WebCal. Take control of your level process with WebCal software, and experience the future of level automation today.

Company Informatio

Systems Overview

Programmable Controllers

Field I/O

Software

other HMI

Drives

Soft Starters

Motors & Gearbox

Steppers

Motor Controls

Proximity Sensors

Photo Sensors

Switches

Encoders

Sensors Pressure Sensors

Temperature

Pushbuttons Lights

Process Relays/ Timers

Comm

Terminal Blocks & Wiring

Circuit Protection

Enclosures Tools

Safety

Appendix

Product Index

Part # Index



### **EchoSonic II LU Series Ultrasonic**We Do Your Level Best \*\* \*\*EchoSonic II LU Series Ultrasonic\*\* \*\* \*\*THE TOTAL PROPERTY OF THE PROPERT **Liquid Level Transmitters**

#### Overview

The EchoSonic II LU Series ultrasonic liquid level transmitters provide continuous level measurement up to 9.8 ft (3m), 18 ft (5.5m), 26.2 ft (8m) or 32.8 ft (10m), with a 4-20mA signal output, and are configured via WebCal software. This noncontact liquid level sensor is ideally suited for corrosive, ultrapure, sticky or dirty liquids, and is broadly selected for bulk storage, dry tank, lift station and process tank level applications.



Part No. LU23/28/29

#### **Features**

- · Continuous level measurement up to 9.8 ft (3m), 18 ft (5.5m), 26.2 ft (8m) or 32.8 ft (10m)
- DSP auto adaptive filters enable plug and play operation optimizing signal output filtering and obstacle recognition
- · Configuration is fast and easy via WebCal software and USB adapter
- Narrow 2" or 3" beam width for applications with limited measurement space
- Short 4" or 8" dead band maximizes the measurable filling capacity of the tank
- PVDF transducer and NEMA Type 6P polycarbonate enclosure for corrosive liquids, UV stable for outdoor use
- · Automatic temperature compensation for accurate measurement
- · Made in the USA

#### Agency Approvals

• cFMus





Systems Overview

Field I/O

Software

other HMI

Drives

Soft Starters

Motors & Gearbox

Steppers/

Motor Controls

Proximity Sensors

Photo Sensors

Switches Encoders

Sensors

Pressure Sensors

Temperature

Pushbuttons Lights Process Relays/ Timers

Comm Terminal Blocks & Wiring

Circuit Protection Enclosures Tools

Safety

Appendix

Product

Index

Part # Index

Programmable Controllers

KoHS	<b>(</b> E	APPROVED OF APPROVED

		Technical Specification	ns				
Model	LU27-00	LU23-00	LU28-00	LU29-00			
Price	<>	<>	<>	<>			
Range	4 in to 9.8 ft (10 cm to 3m)	8 in to 18.0 ft (20 cm to 5.5m)	8 in to 26.2 ft (20 cm to 8m)	8 in to 32.8 ft (20 cm to 10m)			
Accuracy		± 0.2%	± 0.2% of range				
Resolution	0.019 in (0.5 mm)	0.039 in (1 mm) 0.079 in (2 mm)					
Sensing Dead Band*	4 in (10.2 cm)	4 in (10.2 cm) 8 in (20.3 cm)					
Beam Width	2 in (5.1 cm)		3 in (7.6 cm)				
Configuration		WebCal Free Software and L	199-1001 Fob USB Adapter				
Memory		Non-v	rolatile				
Loop Supply Voltage		14 - 28	3 VDC <sup>1</sup>				
Consumption		0.5	5W				
Loop Resist		500Ω @	24 VDC				
Signal Output	4-20 mA, two-wire						
Signal Invert	4-20 mA or 20-4 mA						
Signal Fail-Safe	4 mA, 20 mA, 21 mA, 22 mA or hold last						
Process Temperature	-4° to 140°F (-20° to 60°C)						
Temp. Compensation		Autor					
Ambient Temperature		-31° to 140°F	· · · · · · · · · · · · · · · · · · ·				
Pressure		MWP = 30	· /				
Enclosure Rating		NEMA Type 6P, IP67, encapsulated, corr	osion resistant & submersible, UV stable	9			
Enclosure Material		· · · · · · · · · · · · · · · · · · ·	rbonate				
Transducer Material		PV	<del></del>				
Cable Jacket Material	Polyurethane						
Cable Type	4-conductor, shielded						
Cable Length	10 ft (3m)						
Process Mount	<ol> <li>NPT (See accessories for installation fittings)</li> </ol>	2" 1	2" NPT (See accessories for installation fittings)				
Mount Gasket	Viton (included, replacement part number 200128)	Viton	n (included, replacement part number 200129)				
Weight (lbs)	1.4	1.8	1.8	1.8			
Classification		General	purpose				
Compliance	CE, RoHS						
Agency Approvals	cFMus						

<sup>\*</sup> Dead band is the minimum distance the sensor must be mounted above the max liquid level.


<sup>1</sup> If supply exceeds 28 VDC damage to the transmitter may occur.

### EchoSonic II LU Series Ultrasonic **Liquid Level Transmitters**


#### **Dimensions**


#### inches [mm]


#### LU27-00

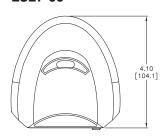



#### LU23/28/29-00

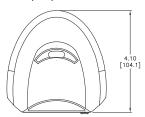

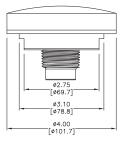

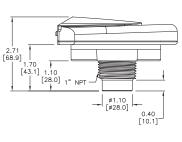


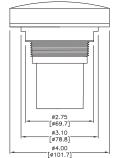


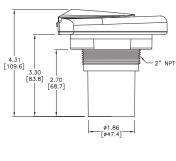

When installing the 1" NPT Level Sensors care should be used to isolate the sensor housing from the tank. This can easily be done by using any of the Flowline mounting accessories which are designed to provide the isolation needed.


#### Wiring

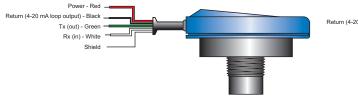

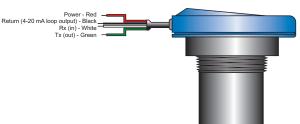

### Configuration

The settings for the the LU series are configured with free WebCal software (downloadable from AutomationDirect Web site) and an LI99-1001 Fob USB adapter (purchased separately).

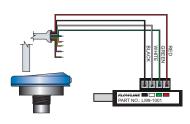

### Maximum Loop Resistance in $\Omega$ 500 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 Supply Voltage

See the end of the Ultrasonic Level Sensor Section for further details and Accessories



### **CWLINE** WebCal Ultrasonic Level Sensor Software and USB Fob **Adapter**

#### Overview

WebCal PC software is a utility program that allows users to easily configure their EchoSonic II and EchoPod level transmitters, switches, and controllers. Download your free copy of WebCal at www.AutomationDirect.com, and connect your sensor through the Fob USB adapter (LI99-1001). Develop your configuration using pre-programmed function menus as the tank graphic and set point fields automatically change to match your configuration. Then, input your level set point values and click the Write to Unit button. Your configuration will be downloaded into the sensor and verified in less than a second. Last, click the Wiring Diagram button to open a wiring schematic of your configuration in PDF format. Print the document, disconnect the sensor and wire it per the schematic. It's that simple.

Configuration files can be named, saved, emailed, printed, opened and used again under revision control. The advanced feature page enables you to change the measurement signal, output filtering and invert relay states from NO to NC. As new software or firmware becomes available, they can be downloaded and updated through WebCal.

#### **System Requirements**


- · Windows®7 32 or 64 bit, Vista, or XP
- 1 USB® 2.0 Port
- 10 Mb hard disk space
- 256 Mb RAM

#### **Features**


- · 169 configurations with pull-down menu selections
- Graphical interface lets you visualize your configuration
- · Applicable level set point fields appear automatically
- · Installs and tests configuration in less than a second
- · Available PDF wiring diagram for each configuration
- Technical help menu with FAQs, tips and glossary
- Rapidly program sensors to the same configuration
- · Save configuration files for future use or reference
- · Print wiring diagrams and configuration text files
- Email configuration files to other remote users
- · Made in the USA

WebCal Ultrasonic Level Sensor Software and USB Adapter							
Part No.	Item Photo	Description	Quantity	Weight (lbs)	Price		
L199-1001	ACHER MANAGEMENT	Flowline Fob USB adapter, required for use with WebCal software to configure Flowline EchoPod and EchoSonic II ultrasonic level sensors.	1	0.1	<>		
WebCal	The state of the s	Configuration software CD for Flowline EchoPod and EchoSonic II ultrasonic level sensors (also available as a free download from the AutomationDirect Web site). Requires an LI99-1001 Fob USB adapter (purchased separately).	1	0.1	<>		

#### **EchoPod Configuration**

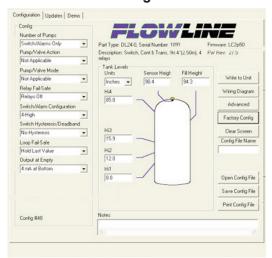

#### EchoSonic II Configuration

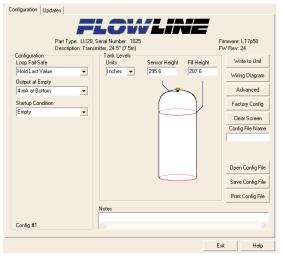

Company Information

Systems Overview

Programmable Controllers

Field I/O

Software

other HMI

Drives

Soft Starters

Motors & Gearbox

Steppers/

Controls

Proximity Sensors

Photo

Switches

Encoders

Current Sensors

Pressure Sensors

Temperature

Pushbuttons

Lights Process

Relays/ Timers

Comm Terminal

Blocks & Wiring

Circuit

Enclosures

Tools

Safety Appendix

Product Index

Part # Index



### Ultrasonic Liquid Level Sensor Accessories

Ultrasonic Liquid Level Sensor Accessories							
Part No.	Item Photo	Description	Quantity	Weight	Price		
LM50-1001		Flowline side mount bracket, 2 inch NPT female threads, polypropylene (PP), for use with Flowline DL34, LU23, LU28, and LU29 series ultrasonic level sensors	1	0.4	<>		
LM50-1001-1		Flowline side mount bracket, 2 inch NPT female threads, polypropylene (PP), and 2 inch NPT male x 1 inch NPT female reducer bushing (PVC), for use with Flowline DL14, DL24, DS14, DL10, DX10, and LU27 series ultrasonic level sensors	1	0.6	<>		
LM52-1400		Flowline reducer bushing, 2 inch NPT male x 1 inch NPT female threads, PVC, for use with Flowline DL14, DL24, DS14, DL10, DX10, and LU27 series ultrasonic level sensors	1	0.2	<>		
LM52-2400		Flowline reducer bushing, 3 inch NPT male x 2 inch NPT female threads, PVC, for use with Flowline DL34, LU23, LU28, and LU29 series ultrasonic level sensors	1	0.6	<>		
LM52-1890	l.	Flowline low-profile bulkhead fitting, 1 inch NPT female x slip socket, with mounting nut, PVC, for use with Flowline DL14, DL24, DS14, DL10, DX10, and LU27 series ultrasonic level sensors	1	0.5	<>		
LM52-2890		Flowline low-profile bulkhead fitting, 2 inch NPT female x slip socket, with mounting nut, PVC, for use with Flowline DL34, LU23, LU28, and LU29 series ultrasonic level sensors	1	1.2	<>		
LM52-1850		Flowline mounting flange, 1 inch NPT female threads, PVC, for use with Flowline DL14, DL24, DS14, DL10, DX10, and LU27 series ultrasonic level sensors	1	0.5	<>		
LM52-2850		Flowline mounting flange, 2 inch NPT female threads, PVC, for use with Flowline DL34, LU23, LU28, and LU29 series ultrasonic level sensors	1	1.0	<>		
204038	0	Replacement mounting gasket, for use with Flowline DL14, DL10, DX10, and DS14 series ultrasonic level sensors	1	0.1	<>		
200128	0	Replacement mounting gasket, for use with Flowline DL24 and LU27 series ultrasonic level sensors	1	0.1	<>		
200129	0	Replacement mounting gasket, for use with Flowline DL34, LU23, LU28, and LU29 series ultrasonic level sensors	1	0.1	<>		

When installing the 1" NPT Level Sensors care should be used to isolate the sensor housing from the tank. This can easily be done by using any of the Flowline mounting accessories which are designed to provide the isolation needed.


#### **Dimensions**

#### inches [mm]

#### LM50-1001

## 3.80 [96.5] 1.90 [48.3] -GASKET - ADJUSTING PLATE 1.49 [37.8]

#### LM50-1001-1

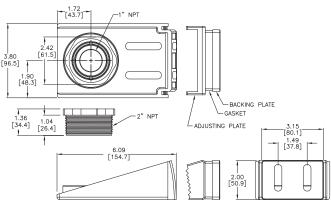





# Ultrasonic Liquid Level Sensor Accessories

#### **Dimensions**


#### inches [mm]


#### LM52-1400

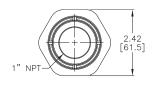

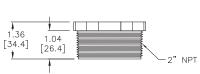



#### LM52-2400

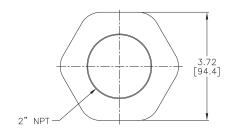

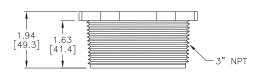



#### LM52-1890

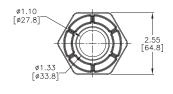

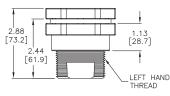


#### LM52-2890

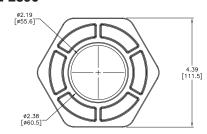


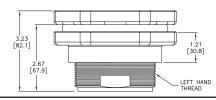

#### LM52-1850

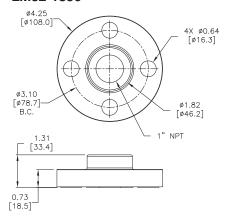

#### LM52-2850

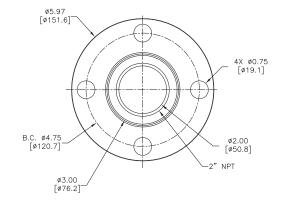





Company Information

Systems Overview

Programmable Controllers

Field I/O

Software

C-more & other HMI

Drives

Soft Starters

Motors & Gearbox

Steppers/ Servos

Motor Controls

Sensors

Photo Sensors

Limit Switches

Encoders

Current Sensors

Pressure Sensors

Temperature Sensors

Level Sensors

Pushbuttons Lights

Droope

Relays/ Timers

Comm.

Terminal Blocks & Wiring

ower

Circuit Protection

Enclosures

Tools

Pneumatics

Safety

Appendix

Product Index

Part # Index