


Input Specifications	
<b>Input Channels</b>	8
<b>Module Signal Input Range</b>	0–20 mA
<b>Signal Resolution</b>	13-bit
<b>Resolution Value of LSB (least significant bit)</b>	0–20 mA = 2.44µA per count (1LSB = 1 count)
<b>Data Range</b>	0–8191 counts
<b>Input Type</b>	Sinking, Single-ended (1 common)
<b>Maximum Continuous Overload</b>	±31mA
<b>Input Impedance</b>	243Ω, ±1%, 1/8W Current Input
<b>Filter Characteristics</b>	Low Pass, -3dB @ 120Hz
<b>Sample Duration Time</b>	2ms per channel (does not include ladder scan time)
<b>All Channel Update Rate</b>	20ms
<b>Open Circuit Detection Time</b>	Zero reading within 100ms
<b>Conversion Method</b>	Successive approximation
<b>Accuracy vs. Temperature</b>	±75PPM / °C maximum
<b>Maximum Inaccuracy</b>	0.5% of range (including temperature drift)
<b>Linearity Error (end to end)</b>	±0.037% of range Monotonic with no missing codes
<b>Input Stability and Repeatability</b>	±0.024% of range
<b>Maximum Full Scale Calibration Error (Including Offset)</b>	±0.098% of range
<b>Maximum Offset Calibration Error</b>	±0.098% of range
<b>Max Crosstalk at DC, 50Hz and 60Hz</b>	±0.049% of range
<b>Recommended External Fuse</b>	Edison S500-32-R, 0.032 A fuse
<b>External Power Supply Required</b>	24VDC (-20% / + 25%), 30mA

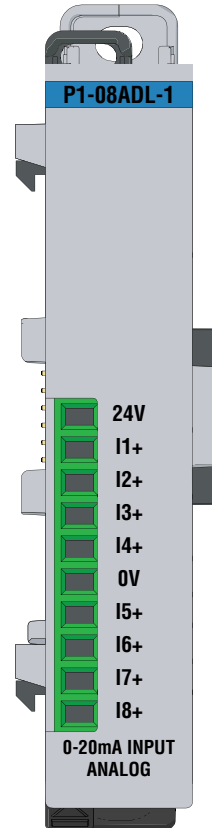

## P1-08ADL-1 Analog Input

The P1-08ADL-1 Low Resolution Analog Input Module provides eight current sinking channels for converting 0–20 mA analog signals to digital value of 0–8191 (13-bit) for use with the Productivity1000 system.

Input Specifications	1
General Specifications	2
Terminal Block Specifications	2
Wiring Diagram and Schematic	3
Module Installation Procedure	4
QR Code	4
Wiring Options	5
Module Configuration	5
Linear Scaling	6
Non-Linear Scaling	6
Warning	8

**Terminal Block sold separately, (see wiring options on page 5).**

Warranty: Thirty-day money-back guarantee. Two-year limited replacement (See [www.productivity1000.com](http://www.productivity1000.com) for details).

General Specifications	
<b>Operating Temperature</b>	0° to 60°C (32° to 140°F)
<b>Storage Temperature</b>	-20° to 70°C (-4° to 158°F)
<b>Humidity</b>	5 to 95% (non-condensing)
<b>Environmental Air</b>	No corrosive gases permitted
<b>Vibration</b>	IEC60068-2-6 (Test Fc)
<b>Shock</b>	IEC60068-2-27 (Test Ea)
<b>Field to Logic Side Isolation</b>	1800VAC applied for 1 second
<b>Insulation Resistance</b>	> 10MΩ @ 500VDC
<b>Heat Dissipation</b>	1200mW
<b>Enclosure Type</b>	Open Equipment
<b>Module Location</b>	Any I/O position in a Productivity1000 System
<b>Field Wiring</b>	Removable terminal block (sold separately). Use <b>ZIP</b> link Wiring System optional See "Wiring Options" on page 5.
<b>EU Directive</b>	See the "EU Directive" topic in the Productivity Suite Help File. Information can also be obtained at: <a href="http://www.productivity1000.com">www.productivity1000.com</a>
<b>Terminal Type (sold separately)</b>	10-position Removable Terminal Block
<b>Weight</b>	71g (2.5 oz)
<b>Agency Approvals</b>	UL 61010-1 and UL 61010-2-201 File E139594, Canada & USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010-2-201 Safety)*


\*See CE Declaration of Conformance for details.

Terminal Block Specifications		
Part Number	P1-10RTB	P1-10RTB-1
<b>Positions</b>	10 Screw Terminals	10 Spring Clamp Terminals
<b>Wire Range</b>	30–16 AWG (0.051–1.31 mm <sup>2</sup> ) Solid / Stranded Conductor 3/64 in (1.2 mm) Insulation Max. 1/4 in (6–7 mm) Strip Length	28–16 AWG (0.081–1.31 mm <sup>2</sup> ) Solid / Stranded Conductor 3/64 in (1.2 mm) Insulation Max. 19/64 in (7–8 mm) Strip Length
<b>Conductors</b>	"USE COPPER CONDUCTORS, 75°C" or equivalent.	
<b>Screw Driver</b>	0.1 in (2.5 mm) Maximum*	
<b>Screw Size</b>	M2	N/A
<b>Screw Torque</b>	2.5 lb-in (0.28 N-m)	N/A

\*Recommended Screw Driver TW-SD-MSL-1




# P1-08ADL-1 Schematic

# P1-08ADL-1 Wiring Diagram

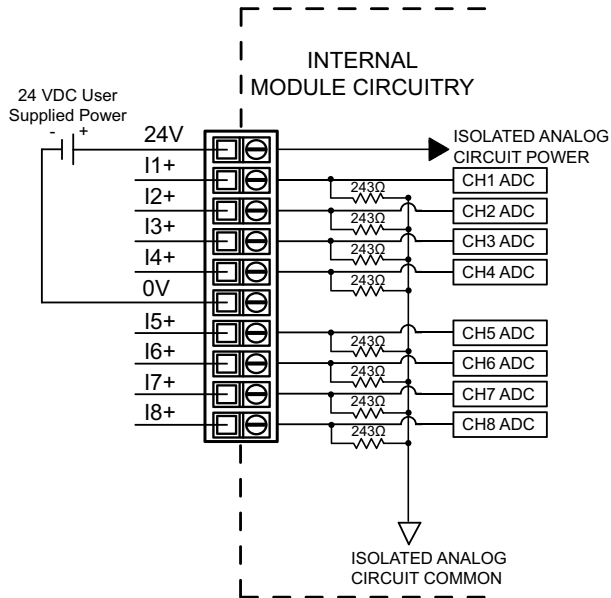

## Current Input Circuits

An Edison S500-32-R 0.032 A fast-acting fuse is recommended for current loops.

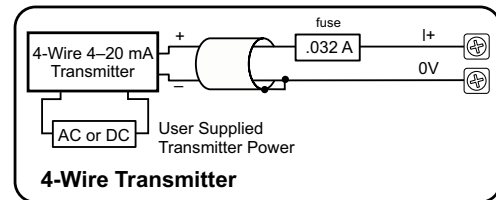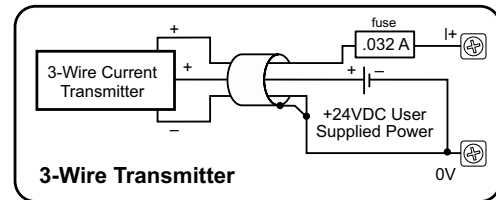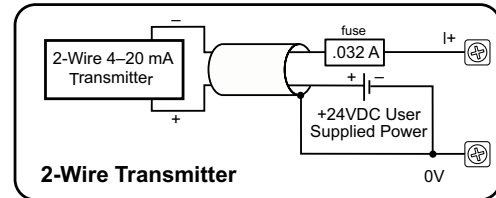


Note: Do not connect both ends of shield.

# Module Installation

# QR Code


**WARNING:** Do not add or remove modules with field power applied.

**Step One:** With latch in "locked" position, align connectors on the side of each module and stack by pressing together. Click indicates lock is engaged.


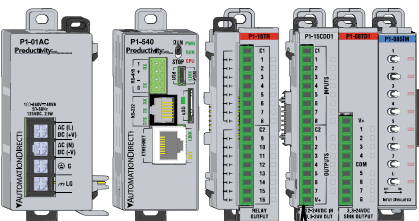


**Step Two:** Attach field wiring using the removable terminal block or ZIPLink wiring system.

Check all latches are secure after modules are connected.

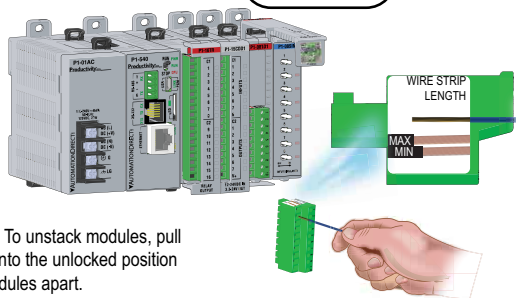

**Step Three:** To unstack modules, pull locking latch up into the unlocked position and then pull modules apart.

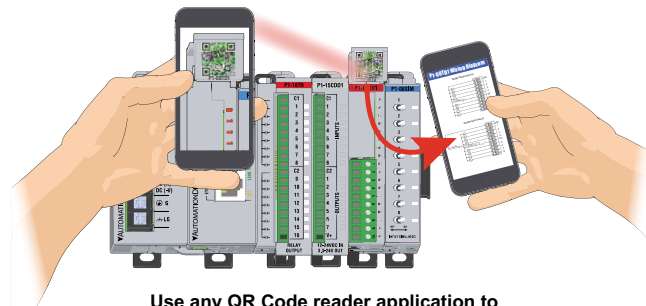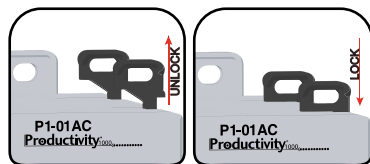


Use any QR Code reader application to display the module's product insert.

# Module Configuration

## Wiring Options


### 1 ZIPLink Feed Through Modules and Cables<sup>1</sup>

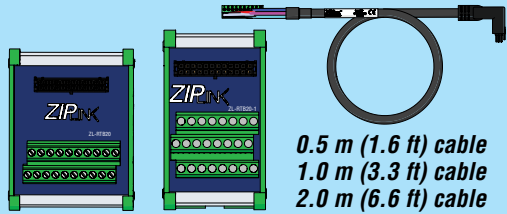

ZL-RTB20  
ZL-RTB20-1


ZL-P1-CBL10  
ZL-P1-CBL10-1  
ZL-P1-CBL10-2

### 2 Terminal Block with pigtail cable

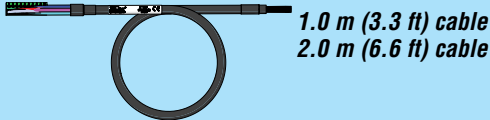

ZL-P1-CBL10-1P  
ZL-P1-CBL10-2P

### 3 Screw Terminal Block only

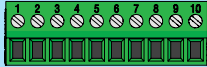

P1-10RTB  
(Quantity 1)

### 4 Spring Clamp Terminal Block only



P1-10RTB-1  
(Quantity 1)

### 5 Accessories<sup>2</sup>



ZL-RTB-COM


TW-SD-SL-1

TW-SD-MSL-1

1. Cable + ZIPLink Module = Complete System
2. ZL-RTB-COM provides a common connection point for power or ground

Using the Hardware Configuration tool in the Productivity Suite programming software, drag and drop the P1-08ADL-1 module into the base configuration.

If desired, assign a *User Tagname* to each input point (channel) selected and to each *Status Bit Item*. A *Stop Mode Value* may be assigned.

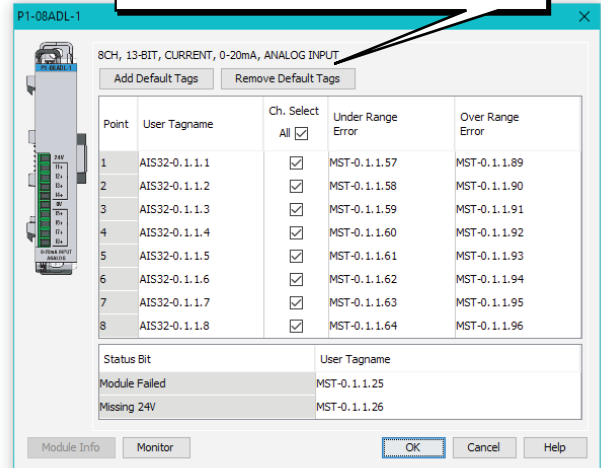

# Linear Scaling

The Scale (Linear) function can be used to:

- Convert an application specific range to range which is native to the analog output module.
- Make other linear conversions in ranges appropriate to the application.

Select the Input and Output tags appropriate for the application. Convert raw input signals to engineering units for use in the program, or convert engineering units to output signals for control purposes

Input	Output
min	min
max	max

# Non-Linear Scaling

The Scale (Non-Linear) function can be used for Non-Linear applications.

Input value	Desired Output
0	0
1	5
2	1
3	1.55
4	2.25
5	3.07
6	4
6.5	5
7	7
0	0
0	0
0	0
0	0
0	0
0	0

Enter actual output values for each input value break point.

Input	Output
min	min
max	max



**WARNING:** To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

***Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.***

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Document Name	Edition/Revision	Date
P1-08ADL-1-DS	1st Edition, Rev A	4/30/2019

Copyright 2019, AutomationDirect.com Incorporated/All Rights Reserved Worldwide