
## 1-800-633-0405 **Analog Input Modules**

#### P3-08AD \$393.00

### Voltage/Current Input

The P3-08AD Voltage/Current Analog Input Module provides 8 channels for receiving ±10VDC, ±5VDC, 0 to 5 VDC, 0 to 10VDC, and 0 to 20mA signals.

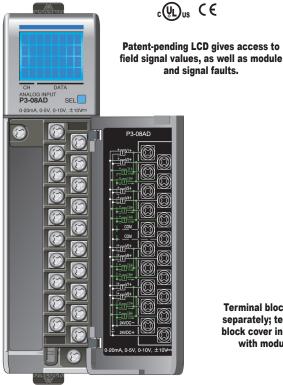

**Terminal block sold** separately; terminal block cover included with module.

Removable Terminal Block Specifications			
Description Part No. <u>P3-RTB</u> ; 20 screw terminals			
Wire Range 22–14 AWG (0.324 to 2.08 sq. mm) Solid / stranded conductor 3/64 in. (1.2 mm) insulation maximum USE COPPER CONDUCTORS , 60°C or equivalent.			
Screw Driver Width 1/4 inch (6.5 mm) maximum			
Screw Size M3 size			
Screw Torque	Field terminals - 7–9 in lb (0.882–1.02 N·m) Self-jacking screws - 2.7–3.6 in lb (0.3–0.4 N·m). Do not overtighten screws when installing terminal block.		

We recommend using prewired **ZIP**Link cables and connection modules. See Wiring Solutions.



Terminal block cover included. If you wish to hand-wire your module, a removable terminal block is sold separately. Order part number P3-RTB.

WARNING: EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

### Please note: \$US prices shown For current \$AUD visit www.directautomation.com.au

Input Specifications			
Input Channels	8		
Module Signal Input Ranges	±10VDC, ±5VDC, 0–5 VDC, 0–10 VDC, 0–20mA		
Signal Resolution	16-bit		
Resolution Value of LSB (least significant bit)	1 LSB = 1 count ±10V = 305μV ±5V = 152μV 0–5V = 76μV 0–10V = 152μV 0–20mA = 0.305 μA		
Data Range	0 to 65535 counts unipolar -32768 to +32767 counts bipolar		
Maximum Continuous Overload	±31mA, current input ±100V, voltage input		
Input Impedance	1MΩ ±10% voltage input 250Ω ±0.1% 1/4 W. current input		
Hardware Filter Characteristics	Low pass 1st order, -3dB@48Hz		
Sample Duration Time	455µs per channel (does not include ladder scan time)		
All Channel Update Rate	4ms		
Open Circuit Detection Time	Zero reading within 1s (current input only)		
Conversion Method	Successive approximation		
Accuracy vs. Temperature	±10PPM / °C maximum		
Maximum Inaccuracy	0.1% of range voltage, 0.2% of range current (including temperature drift)		
Linearity Error (end to end)	±0.01% of range max., ±10V & ±5V ±0.015% of range max., 0–10 V, 0–5 V & 0–20 mA Monotonic with no missing codes		
Input Stability and Repeatability	±0.035% of range (after 10 min. warmup)		
Full Scale Calibration Error (not including offset)	±0.1% of range maximum		
Offset Calibration Error	±0.065% of range maximum		
Max Crosstalk	-96dB		
Recommended Fuse (external)	Edison S500-32-R, .032A fuse on current inputs only		
External DC Power Required	24VDC (-20% / + 25%) 33mA		


General Specifications			
Operating Temperature	0°C- 60°C (32°F-140°F),		
Storage Temperature	-20°C-70°C (-4°F-158°F)		
Humidity	5 to 95% (non-condensing)		
Environmental Air	No corrosive gases permitted		
Vibration	IEC60068-2-6 (Test Fc)		
Shock	IEC60068-2-27 (Test Ea)		
Field to Logic Side Isolation	1800VAC applied for 1s		
Insulation Resistance	>10MQ @ 500VDC		
Heat Dissipation	1.1 W		
Enclosure Type	Open equipment		
Module Keying to Backplane	Electronic		
Module Location	Any I/O slot in any local, expansion, or remote base in a Productivity3000 system.		
Field Wiring	Removable terminal block (not included). Use <b>ZIP</b> Link wiring system or optional terminal block. See Wiring Solutions.		
Terminal Type (not included)	20-position removable terminal block		
Weight	105g (3.73 oz)		
Agency Approvals	UL508 file E157382, Canada & USA UL1604 file E200031, Canada & USA CE (EN61131-2*) This equipment is suitable for use in Class 1, Division 2, Groups A, B, C and D or non-hazardous locations only.		


\*Meets EMC and Safety requirements. See the Declaration of Conformity for details.

# Analog Input Modules

## P3-08AD (cont'd)

Wiring Diagrams

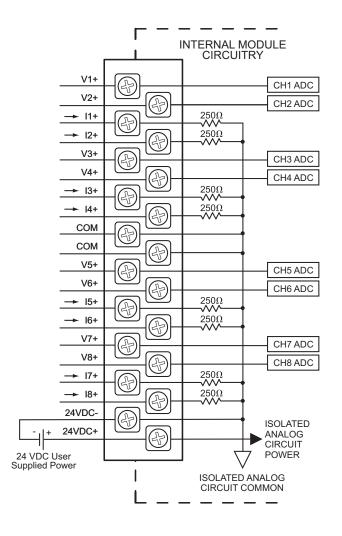

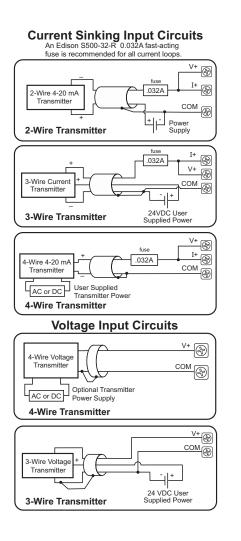



Wiring Solutions

### Wiring Solutions using the **ZIP**Link wiring system

**ZIP**Links eliminate the normally tedious process of wiring between devices by utilizing prewired cables and DIN rail mount connector modules. It's as simple as plugging in a cable connector at either end or terminating wires at only one end. Prewired cables keep

installation clean and efficient, using half the space at a fraction of the cost of standard terminal blocks. There are several wiring solutions available when using the **ZIP**Link System ranging from

## Solution 1: Productivity Series I/O Modules to ZIPLink Connector Modules

When looking for quick and easy I/O-to-field termination, a **ZIP**Link connector module used in conjunction with a prewired **ZIP**Link cable, consisting of an I/O terminal block at one end and a multi-pin connector at the other end, is the best solution.

PLC I/O-to-**ZIP**Link Connector Modules that are ready for field termination, options for connecting to third party devices, GS, DuraPulse and SureServo Drives, and specialty relay, transorb and communications modules. Pre-printed I/O-specific adhesive label strips for quick marking of **ZIP**Link modules are provided with **ZIP**Link cables. See the following solutions to help determine the best **ZIP**Link system for your application.

Using the PLC I/O Modules to **ZIP**Link Connector Modules selector tables located in this section,

- 1. Locate your I/O module/PLC.
- 2. Select a **ZIP**Link Module.
- 3. Select a corresponding **ZIP**Link Cable.



### Solution 2: Productivity Series I/O Modules to ZIPLink Connector Modules

When wanting to connect I/O to another device within close proximity of the I/O modules, no extra terminal blocks are necessary when using the **ZIP**Link Pigtail Cables. **ZIP**Link Pigtail Cables are prewired to an I/O terminal block with colorcoded pigtail with soldered-tip wires on the other end.

Using the I/O Modules to 3rd Party Devices selector tables located in this section,

- 1. Locate your PLC I/O module.
- 2. Select a **ZIP**Link Pigtail Cable that is compatible with your 3rd party device.



### Solution 3: GS Series and DuraPulse Drives Communication Cables

Need to communicate via Modbus RTU to a drive or a network of drives?

**ZIP**Link cables are available in a wide range of configurations for connecting to PLCs and SureServo, SureStep, Stellar Soft Starter and AC drives. Add a **ZIP**Link communications module to quickly and easily set up a multi-device network.

Using the Drives Communication selector tables located in this section,

- 1. Locate your Drive and type of communications.
- 2. Select a **ZIP**Link cable and other associated hardware.





## **Wiring Solutions**

### Solution 4: Serial Communications Cables

**ZIP**Link offers communications cables for use with DirectLOGIC, CLICK, and Productivity3000 CPUs, that can also be used with other communications devices. Connections include a 6-pin RJ12 or 9-pin, 15pin and 25-pin D-sub connectors which can be used in conjunction with the RJ12 or D-Sub Feedthrough modules.

Using the Serial Communications Cables selector table located in this section,

- 1. Locate your connector type
- 2. Select a cable.



### Solution 5: Specialty ZIPLink Modules

For additional application solutions, **ZIP**Link modules are available in a variety of configurations including stand-alone relays, 24VDC and 120VAC transorb modules, D-sub and RJ12 feedthrough modules, communication port adapter and distribution modules, and SureServo 50-pin I/O interface connection.

Using the **ZIP**Link Specialty Modules selector table located in this section,

- 1. Locate the type of application.
- 2. Select a **ZIP**Link module.



### Solution 6: ZIPLink Connector Modules to 3rd Party Devices

If you need a way to connect your device to terminal blocks without all that wiring time, then our pigtail cables with color-coded soldered-tip wires are a good solution. Used in conjunction with any compatible **ZIP**Link Connector Modules, a pigtail cable keeps wiring clean and easy and reduces troubleshooting time.

Using the Universal Connector Modules and Pigtail Cables table located in this section,

- 1. Select module type.
- 2. Select the number of pins.
- 3. Select cable.



## CPU I/O Modules to ZIPLink Connector Modules - Productivity3000®

Productivity3000 CPU Input Module <i>ZIP</i> Link Selector				
CP	U	ZIPLink		
Input Module	# of Terms	Component	Module Part No.	Cable Part No.
P3-08NAS	20	Feedthrough		
P3-08ND3S	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 *
P3-16NA	20	Feedthrough		ZL-P3-CBL20-1L ZL-P3-CBL20-2L
P3-16ND3	20	Feedthrough		
P3-10ND3	20	Sensor	ZL-LTB16-24-1	
P3-32ND3	40	Feedthrough	ZL-RTB40	
F3-32ND3	40	Sensor	ZL-LTB32-24-1	ZL-CBL40 ZL-CBL40-1
P3-64ND31	<b>P3-64ND31</b> 40	Feedthrough	ZL-RTB40	ZL-CBL40-1 ZL-CBL40-2
F3-04ND31	40	Sensor	ZL-LTB32-24-1	

Productivity3000 CPU Analog In Module ZIPLink Selector				
CP	U		ZIPLink	
Analog Module	# of Terms	Component	Module	Cable
P3-04ADS	20	Feedthrough		
P3-08AD	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20
P3-16AD-1	20	Feedthrough	<u>ZL-RIDZU</u>	ZL-P3-CBL20-1L
P3-16AD-2	20	Feedthrough		
<u>P3-08RTD<sup>2</sup></u>	Matched Only	See Note 2		
<u>P3-08THM</u> <sup>2</sup>	T/C Wire Only	See Note 2		
<u>P3-04DA</u>	20	Feedthrough		
P3-08DA-1	20	Feedthrough		
P3-08DA-2	20	Feedthrough		
P3-16DA-1	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20-1L ZL-P3-CBL20-2L
P3-16DA-2	20	Feedthrough		
P3-8AD4DA-1	20	Feedthrough		
P3-8AD4DA-2	20	Feedthrough		

Productivity3000 CPU Specialty Module ZIPLink Selector					
C	PU	ZIPLink			
Input Module	# of Terms	Component	Module Part No.	Cable Part No.	
P3-HSI P3-HSO	40	Feedthrough	ZL-RTB40	ZL-CBL40-S ZL-CBL40-1S ZL-CBL40-2S	



Note: **ZIP**Link Connector Modules specifications follow the Compatibility Matrix tables. **ZIP**Link Cables specifications are at the end of this **ZIP**Link section.

Productivity3000 CPU Output Module ZIPLink Selector				
CF	บ	ZIPLink		
Output Module	# of Terms	Component	Module Part No.	Cable Part No.
P3-08TAS	20	Feedthrough		ZL-P3-CBL20 *
P3-08TD1S	20	Feedthrough		ZL-P3-CBL20-1L
P3-08TD2S	20	Feedthrough		ZL-P3-CBL20-2L
P3-08TRS	20	Feedthrough	ZL-RTB20	
P3-16TA	20	Feedthrough		
F3-101A	20	Fuse		
		Feedthrough		
P3-16TD1	20	Fuse	ZL-RFU204	
		Relay (sinking)	ZL-RRL16-24-1	ZL-P3-CBL20
		Feedthrough	ZL-RTB20	ZL-P3-CBL20-1
P3-16TD2	20	Fuse	ZL-RFU204	ZL-P3-CBL20-2
		Relay (sourcing)	ZL-RRL16-24-2	
P3-16TR	20	Feedthrough	ZL-RTB20	
10-1011	20	Fuse	ZL-RFU204	
<u>P3-08TRS-1</u> 3	20	Feedthrough	ZL-RTB20	
<u>1 0-001110-1</u>	20	Fuse	ZL-RFU204	
P3-32TD1	40	Feedthrough	ZL-RTB40	
		Fuse	ZL-RFU40 <sup>4</sup>	
P3-32TD2	40	Feedthrough	ZL-RTB40	
		Fuse	ZL-RFU40 <sup>4</sup>	ZL-CBL40 ZL-CBL40-1
P3-64TD1 <sup>1</sup>	40	Feedthrough	ZL-RTB40	ZL-CBL40-2
		Fuse	ZL-RFU40 <sup>4</sup>	
P3-64TD2 <sup>1</sup>	40	Feedthrough	ZL-RTB40	
		Fuse	ZL-RFU404	

\* Select the cable length by replacing the \* with: Blank = 0.5m, -1 = 1.0m, or -2 = 2.0m.

- 1 The P3-64ND3, P3-64TD1 and P3-64TD2 modules have two 32-point connectors and require two ZIPLink cables and two ZIPLink connector modules.
- 2 These modules are not supported by the ZIPLink wiring system.
- 3 The P3-08TRS-1 output module is derated not to exceed 2A per point maxiumum when used with the ZIPLink wiring system.
- 4 Note: Fuses (5 x 20 mm) are not included. See Edison Electronic Fuse section for (5 x 20 mm) fuse. S500 and GMA electronic circuit protection for fast-acting maximum protection. S506 and GMC electronic circuit protection for time-delay performance. Ideal for inductive circuits.

To ensure proper operation, do not exceed the voltage and current rating of ZIPLink module. ZL-RFU20 = 2A per circuit; ZL-RFU40 = 400 mA per circuit.



# 1-800-633-0405

A variety of discrete, analog and specialty I/O modules are available for use in local, expansion, and remote I/O bases. Specifications for each module are on the following pages.

A filler module is available for unused I/O module slots (part number <u>P3-FILL</u>).

## **Discrete Input Modules**

Productivity3000 Discrete Input Modules				
Part Number	Number of Description		Price	
P3-16SIM	16	Input Simulator Module	\$197.00	
P3-08ND3S	8	Isolated Sinking/Sourcing DC Input	\$99.00	
P3-16ND3	16	Sinking/Sourcing DC Input	\$152.00	
P3-32ND3	32	Sinking/Sourcing DC Input	\$208.00	
P3-64ND3	64	Sinking/Sourcing DC Input	\$260.00	
P3-08NAS	8	Isolated AC Input	\$126.00	
P3-16NA	16	AC Input	\$159.00	

\*ZIPLink required.

## Analog I/O Modules

Productivity3000 Analog Input Modules					
Part Number	Part Number of Channels Description				
P3-04ADS	4	Isolated Analog Input	\$724.00		
P3-08AD	8	Analog Input	\$393.00		
P3-16AD-1	16	Analog Input (Current)	\$535.00		
P3-16AD-2	16	Analog Input (Voltage)	\$524.00		
P3-08RTD	8	Analog RTD Input	\$581.00		
P3-08THM	8	Analog Thermocouple Input	\$736.00		

Productivity3000 Analog Output Modules				
Part Number of Channels Description				
P3-04DA	4	Analog Output	\$449.00	
P3-08DA-1	8	Analog Output (Current)	\$779.00	
P3-08DA-2	8	Analog Output (Voltage)	\$725.00	
P3-16DA-1	16	Analog Output (Current)	\$929.00	
P3-16DA-2	16	Analog Output (Voltage)	\$911.00	

Productivity3000 Analog Input/Output Modules				
Part Number Number of Channels Description Price				
P3-8AD4DA-1	8/4	Analog Input/Output (Current)	\$598.00	
P3-8AD4DA-2	8/4	Analog Input/Output (Voltage)	\$617.00	

### **Specialty Modules**

Productivity3000 Specialty Modules					
Part Number Number of Channels Description Price					
P3-HSI	2	High-Speed Pulse Input	\$563.00		
P3-HSO*	2	High-Speed Output	\$587.00		
РЗ-ЅСМ	4 ports	Serial Communications Module	\$475.00		

\*ZIPLink required.

Productivity3000 Discrete Output Modules			
Part Number	Number of Outputs	Description	Price
P3-08TD1S	8	Isolated Sinking Output	\$135.00
P3-08TD2S	8	Isolated Sourcing Output	\$141.00
P3-16TD1	16	Sinking Output	\$162.00
P3-16TD2	16	Sourcing Output	\$167.00
P3-32TD1*	32	Sinking Output	\$208.00
P3-32TD2*	32	Sourcing Output	\$208.00
P3-64TD1*	*64	Sinking Output	\$280.00
P3-64TD2*	*64	Sourcing Output	\$265.00
P3-08TAS	8	Isolated AC Output	\$177.00
P3-16TA	16	AC Output	\$210.00
P3-08TRS	8	Isolated Relay Output	\$159.00
P3-08TRS-1	8	Isolated Relay Output	\$194.00
P3-16TR	16	Relay Output	\$177.00

\*ZIPLink required.


## **Module Installation Procedure**



WARNING: DO NOT APPLY FIELD POWER UNTIL THE FOLLOWING STEPS ARE COMPLETED. SEE HOT-SWAPPING PROCEDURE FOR EXCEPTIONS.

**Step One:** Align circuit card with slot and press firmly to seat module into connector.

**Step Two:** Pull top and bottom locking tabs toward module face. Click indicates lock is engaged.



**Step Three:** Attach field wiring using optional terminal block or **ZIP**Link wiring system and install cover.





To install or remove terminal block cover, press middle to flex cover.



**WARNING:** EXPLOSION HAZARD – DO NOT CONNECT OR DISCONNECT CONNECTORS OR OPERATE SWITCHES WHILE CIRCUIT IS LIVE UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS. DO NOT HOT-SWAP MODULES UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS.